

**A. Refrigerator compartment**

1. Crisper drawers
2. Crisper cover
3. Shelves / Shelf area
4. Thermostat control knob / light
5. Control panel (if provided)
6. Top shelf
7. Door trays
8. Bottle shelf
9. Removable bottle retainer
10. Rating plate (at side of crisper drawer)

**B. Freezer compartment**

11. Upper basket (for fast freezing of fresh food products)
12. Storage area for frozen or deep-frozen food
13. Ice cube tray (inside basket)
14. Freezer compartment inner door panel

- Cool zone
- Intermediate temperature
- Cold zone


**Note:** the number of shelves and the design of accessories may vary depending on the model. Shelves and door trays are all removable.

**Warning:** refrigerator accessories are not dishwasher-resistant.

## CB 18 M/1c

The fridge-freezer is switched on by means of the thermostat knob in the refrigerator compartment. The thermostat knob also provides temperature adjustment for both the refrigerator and freezer compartments.

### Refrigerator / Freezer compartment controls

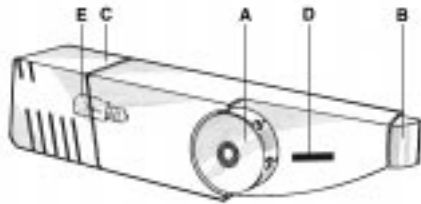


- A. Thermostat knob
- B. Light switch
- C. Light diffuser
- D. Thermostat control reference
- E. Bulb (15W max.)

Thermostat setting ● : no refrigeration, no light  
 Thermostat setting 1 : **minimum** refrigeration  
 Thermostat setting 7 : **maximum** refrigeration

The average recommended thermostat setting is 3.

**Note:** The room air temperature, the number of times the door is opened and the position of the appliance will affect the temperature of the fridge and freezer compartments. Take these factors into consideration when you set the thermostat.


### Freezer compartment control panel (if provided)

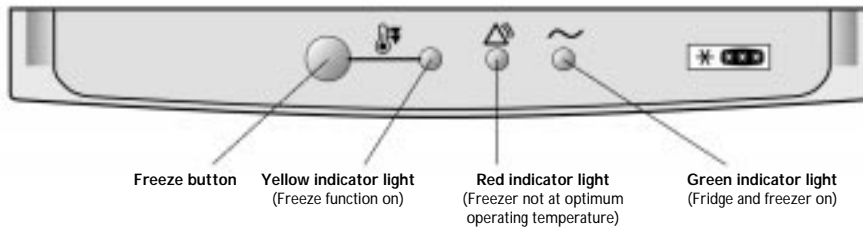

Pressing the freeze button increases freezing power.

Fresh food will be completely frozen after 24 hours and the freeze function should be switched off. When room temperature is lower than 16°C, activating the freeze function will improve food storage properties.

### Removing the diffuser

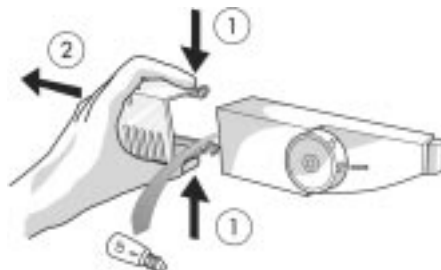

- 1 - Hold the diffuser as shown and squeeze it slightly
- 2 - Slide it towards the rear of the appliance

4619 997 79122/A

(D) (GB) (F) (NL) (E) (P) (I) (GR) (S) (N) (DK) (FIN)